


## Installation Instructions

For WK, WJ, ZJ, XK and KJ (These instructions are directly for WK's but most models will directly relate)


1. Pop Hood
2. Remove 6 plastic clips that hold the front grill in place.

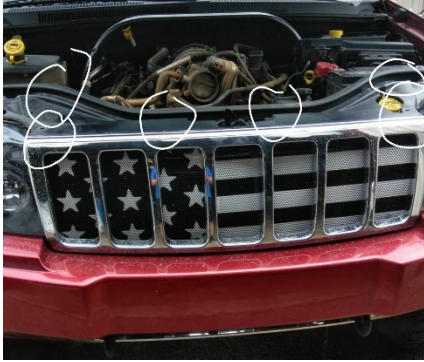

3. Lay a soft cloth down as to not scratch the grill.
4. Use a Dremel or small snippers to remove plastic grill slats and flat fins that restrict the grill insert pieces from lying flat. (use the following cut diagram bellow) \*optional step



5. Place your ZKD Customs grill insert in place and be sure it lays flat. Also check that the stripes lay straight on the grill.
6. Use the self-tapping screws to mount the insert in place. (all the following places are good places to use a self-tapping screws)

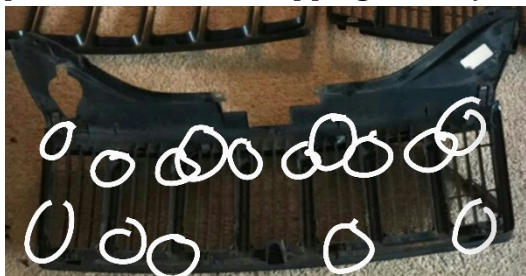

7. Once the grill insert is mounted, reinstall the grill and its clips and close hood.
8. Congratulations your ZKD Customs Grill insert is now installed. Enjoy!

For XJ and MJ

1. Pop hood
2. Remove six bolts holding front clip, along with unplugging all restricting wires.
3. Once the front clip is removed, undo the grill from the front and use a Dremel or snippers to remove the plastic fins from all the slots. (removing the grill slats is an optional step)
4. Place the insert in place between the front grill and the front clip when reinstalling the screws.
5. Lightly bend the insert at the bottom to use the self-tapping screws and mount it in place. (refer to photos below)



6. Once the grill insert is mounted, reinstall the front clip as well as plug in any removed wires.
7. Congratulations Your ZKD Customs insert is installed.

For JK and JKU

1. Pop Hood.
2. Remove front plastic clips on your grill.
3. Pull the front grill forward and slide the insert in place. (make sure the insert is pressed up against the grill completely)
4. Once the insert is in place reinstall the plastic clips and close the hood.
5. Congratulations you've installed your very own ZKD Customs grill insert.

For other models email us personally