



Install instructions

Wrangler (JL,JLU(w/ Trail Cam))

Installation Video: <https://www.youtube.com/watch?v=xgywiOYOWqE>

Tools Needed:

- Flat Head Screwdriver
 - Parts Collection Container
 - Torx Bit Assortment
 - Large Soft Cloth or Towel
 - Dykes / Horizontal Cutters
-

Installation:

1. Remove both front hood latches and prop open the hood. (Fig. 1)
Figure 1



2. Remove six panel clips that hold the top of your grill in place. (Fig. 2) Use a flat head screwdriver under the edge of each clip to separate the head from the body. (Fig. 3) Then remove the clips and place them in the parts collection container.

Figure 2

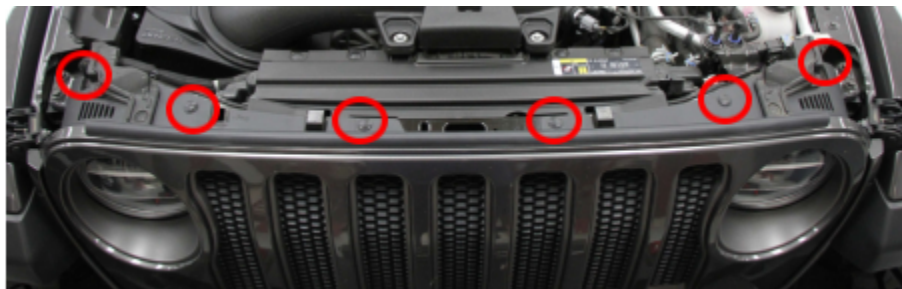


Figure 3



3. Pop the front clips loose by pulling outwards on the grill from the center and below each headlight until it is completely free. (Fig. 4) Watching the install video may help clarify this step.

Figure 4



4. Lay a large soft cloth on a flat surface and set the grill face down.
5. Use a flat head screwdriver and Torx bits to remove the 4 white plastic tabs and Torx screws holding the existing grill insert. Pop it free from its clips, keeping the second trim piece in place. (For some models, this step may be optional.)
6. Cut the four plastic mounting tabs off the grill using dykes. These tabs held the white plastic clips removed earlier. Cut them flush with the grill. Also trim any black clip-style tabs that prevent the new insert from laying flush. (Note: Some models may not have extra clips to trim.)
7. Lay in your ZKD Customs grill insert and press it into place. Secure it using the four central Torx screws.
8. Make sure your insert is centered properly. Snap the front grill back into place and repeat steps 1–3 in reverse order to reinstall.
9. **Congratulations!** Your grill insert is installed!
Feel free to send us pictures, questions, or concerns. Be sure to tag us on social media and leave a review!

<https://www.zkdcustoms.com/reviews>