



Install instructions

Wrangler (JK,JKU)

Installation Video: <https://www.youtube.com/watch?v=De4NAQ47hVo>

Tools:

Flat Head Screwdriver

Parts Collection Container

Installation:

1. Remove both front hood latches and prop open hood. (Fig 1)

Figure 1



2. Remove six panel clips that hold the top of your grill in place. (Fig 2) To do so place flat head screw driver under the edge of the panel clips and separate the head from the rest of the clip. (Fig 3) Once complete remove body of the clips from there hole and place them in the parts collection container.

Figure 2


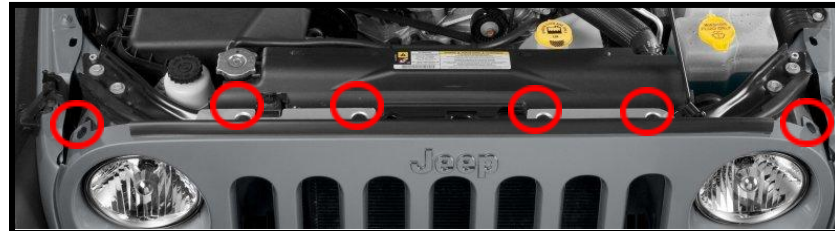


Figure 3



3. Pop the two front clips located directly below the headlight by grabbing above and below the headlight and firmly pulling outwards. (Fig 4)


Figure 4

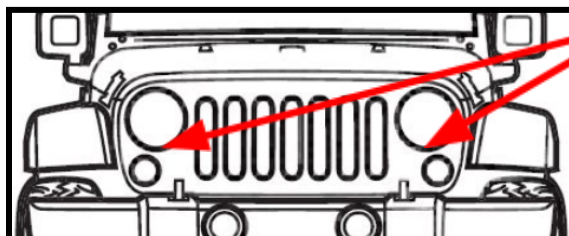

Clip Location

4. Pull your front grill forward and slide your ZKD Customs grill insert into place as far forward as possible. Make sure your grill insert is in front of the sensor on the front drivers side and on some trim Packages you may need to trim the small chrome or black tabs on the backside of your front grill to allow the insert to lay flush with the front of your vehicle.
5. Once the grill insert is pushed down into place press the top edge under the lip on the top of your front grill by pushing the grill insert underneath the edge until it pops into place. (The grill insert may slightly bend at this point to fit, just make sure it is pressed all the way forward.)
6. Make sure your grill insert is centered properly and snap your front grill back into place and repeat steps 1-3 in reverse order. (Fig 5)

Figure 5

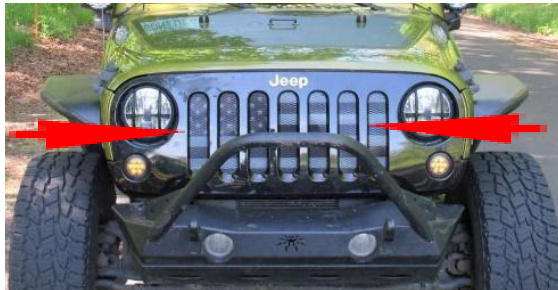

7. Congratulations Your Grill insert is installed! Please feel free to send us any pictures, questions, or concerns regarding our product. Also, be sure to tag us on social media.